


Micro 90/Micro 90 Washer Installation

0. Prepare the cut out hole. **Ø73mm***
1. Press the retention springs upwards and place into the cut out.
2. Once released, the retention springs will hold the fixture in position.

*Important – For this product the hole size is critical to avoid gaps around the flange of the product once installed.

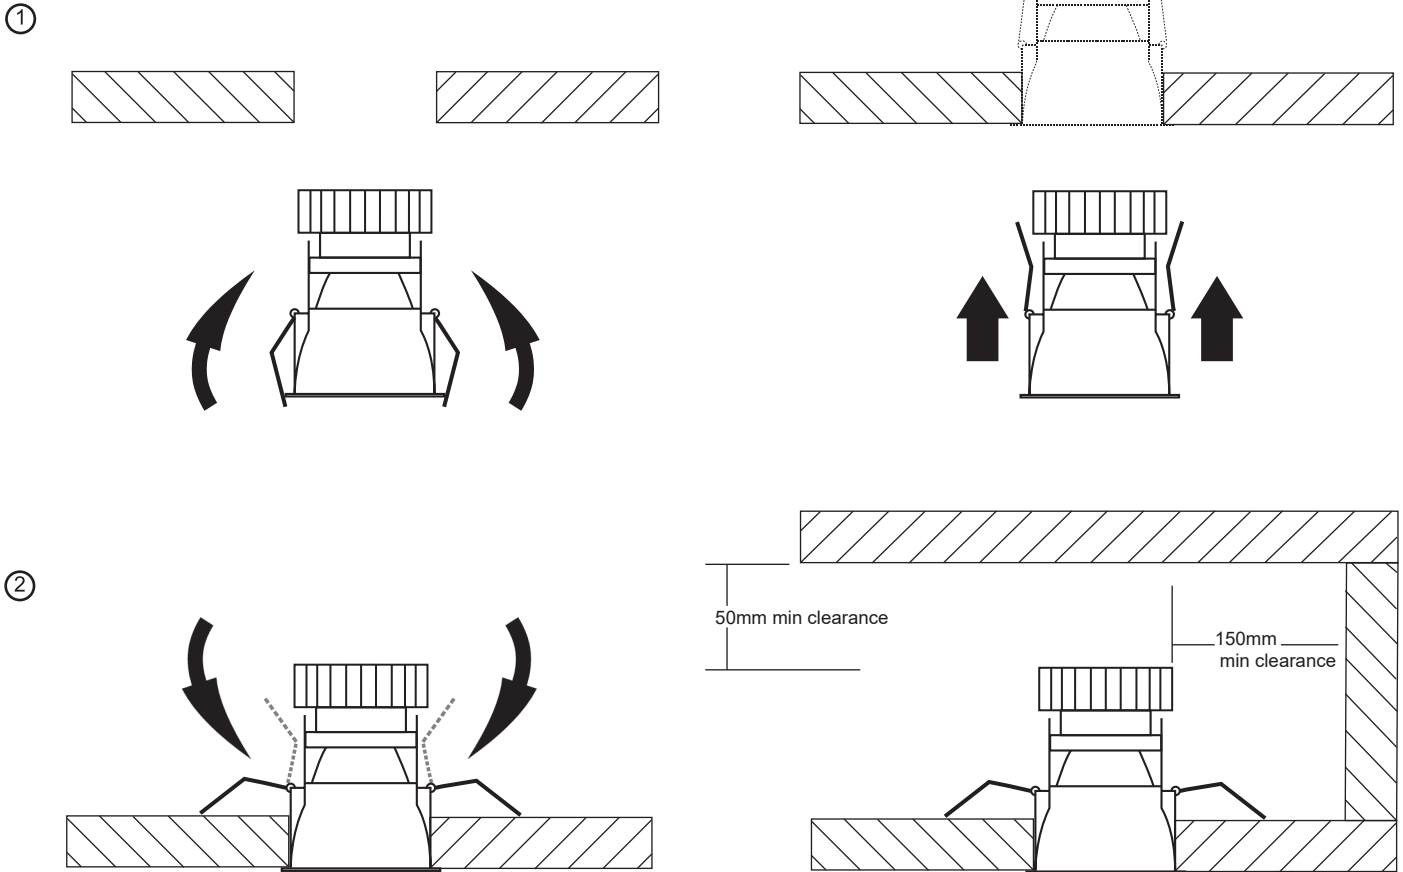

Warnings

Driver

If the driver is disconnected from the LED module. Please ensure that the driver has not been powered for at least 1 minute before reconnecting the LED module. The LED module and driver can be seriously damaged and the warranty invalidated.

alphaLED Module

The alphaLED module is non-serviceable. Tampering will cause serious damage to the LED module and will invalidate the warranty.

Wiring

Ensure the wiring maintains the correct polarity at all times. Incorrect wiring of the LED module or the driver will cause serious damage and will invalidate the warranty.

Connections to the driver should be in accordance with the marking on the driver provided. Live (L) and Neutral (N) connections are marked on the driver.

Take care not to connect any mains potential wires to the control terminals of DALI or Analogue drivers – this will invalidate the warranty.

alphaLED should be connected to its driver according to the following SELV standard.

Red = Positive +

Black = Negative -

Do not cover with insulation

Luminaire not suitable for covering with thermally insulating material. Allow air to flow freely around the fitting.

For indoor use